

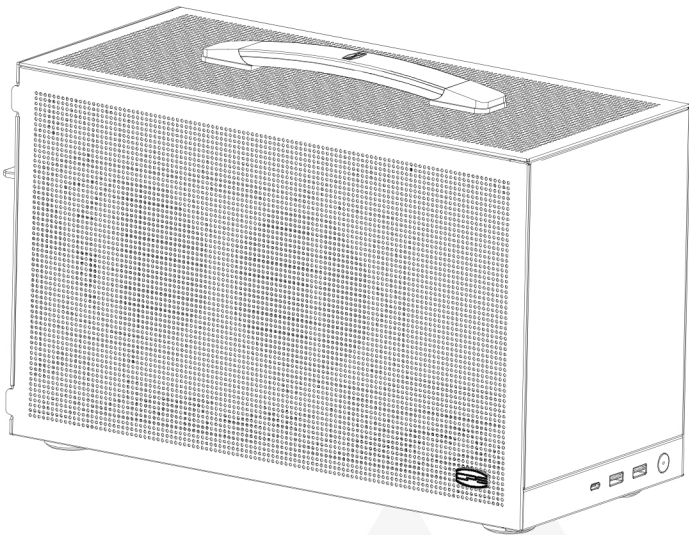


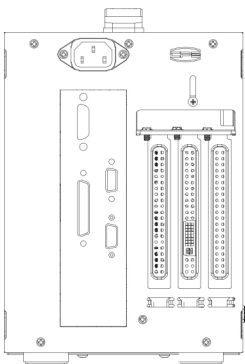

K100/K101 Series

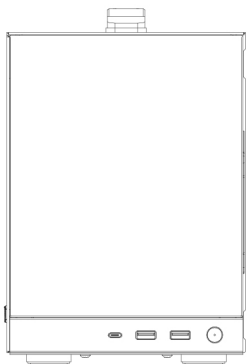

User Manual



www.pccooler.com | Q

Manufacturer: Shenzhen Fluence Technology PLC.
Address: A701, Plant 1, TianAn Cyber Innovation Park, No. 475, Huangge North Road,
Huanggekeng Community, Longcheng Street, Longgang District, Shenzhen, China.
Tel: (+86) 755 8451 1665 E-mail: support@pccooler.cn



EN User Manual **DE** Bedienungsanleitung **JP** ユーザーマニュアル
KR 사용설명서 **FR** Manuel d'utilisation **ES** Manual de Usuario
PT Manual de Utilizador **RU** Руководство пользователя

Item 项目/Q'ty 数量	Name 名称	Used for 用途
A 	x18 Screw M3 5mm	Motherboard/SSD; 主板/SSD
B 	x6 Screw #6-32 6mm 六角螺丝	PSU/PCIE Card; 电源/PCIE卡
C 	x4 Screw #6-32 5mm 圆头螺丝	3.5" HDD; 3.5" 硬盘
D 	x3 Screw #6-32 6.5mm	Motherboard Stud; 主板板螺丝
E 	x5 Cable ties 束线带	Cable management; 理线



- 5  安装机械硬盘
Install 3.5 inch HDD
- 6  安装电源
Install Power Supply Unit

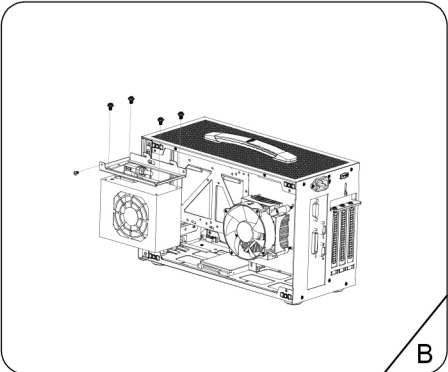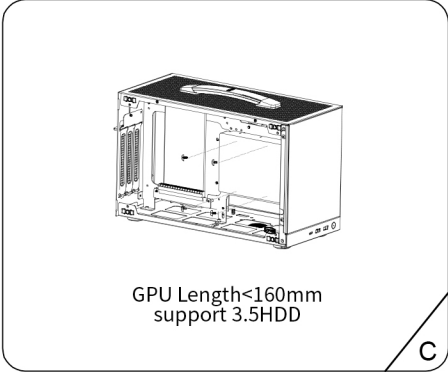



- 1  取下机箱侧板
Remove the side panel
- 2  主板安装
Install the Motherboard

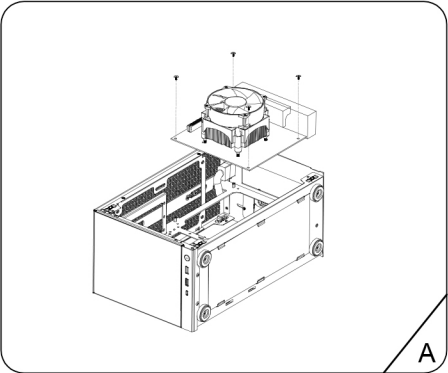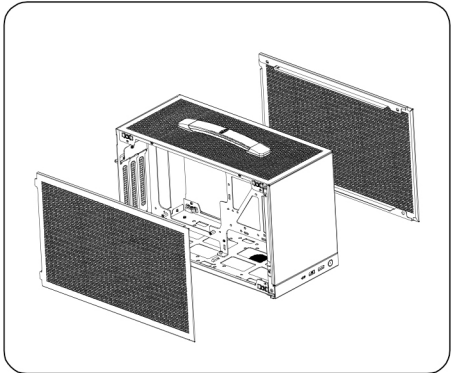

- 7  安装显卡
Install Graphics Card
- 8  安装风扇方法
Install fans Method

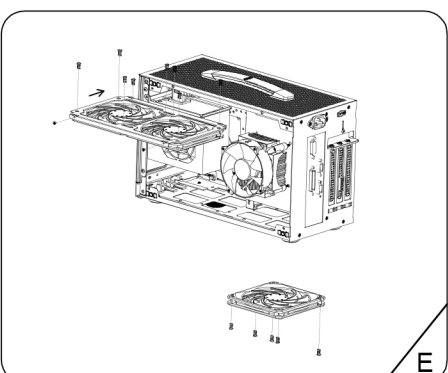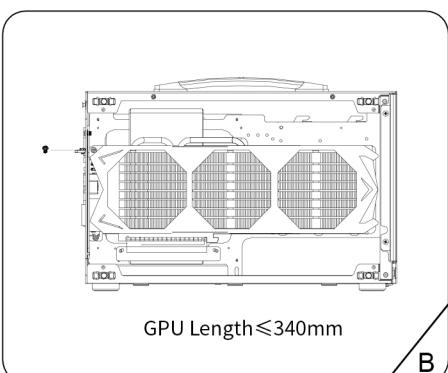

- 3  安装PCI-E延长线
Install the PCI-E Riser Cable
- 4  安装固态硬盘
Install 2.5 inch SSD

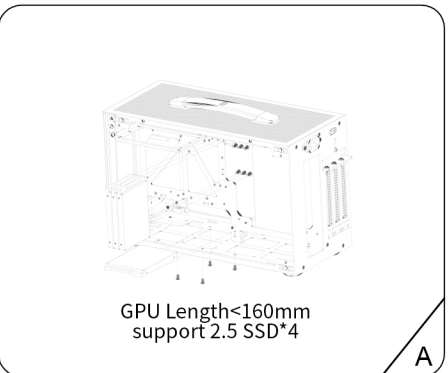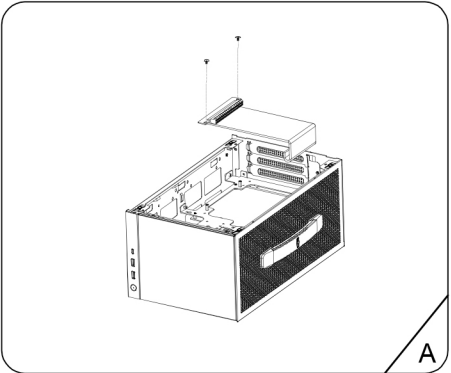

- 9 产品分解图
Decomposition Diagram

